



EQUINE CONCEPTS, LLC

Round Pen Installation Instructions



1. Clear & Grade jobsite



2. Your Round Pen Kit arrives!



3. Drill holes 2.5 ft deep.



4. Remove loose debris & prep. for concrete.



5. Embed uprights in concrete & level.



6. Once ALL uprights are embedded in concrete let cure for 24 hrs.



7. Connect ALL top pieces & setup scaffolding in center of Round Pen.



8. Use scaffolding to connect uprights to circular center piece.



9. Continue connecting all trusses to center piece.



10. After connecting all trusses you can start installing the side walls.



11. The side walls consist of T&G 2x6's




12. Install Gates & then you are ready for the cover.



13. Pull vinyl cover from one side.



14. Center Vinyl Cover.

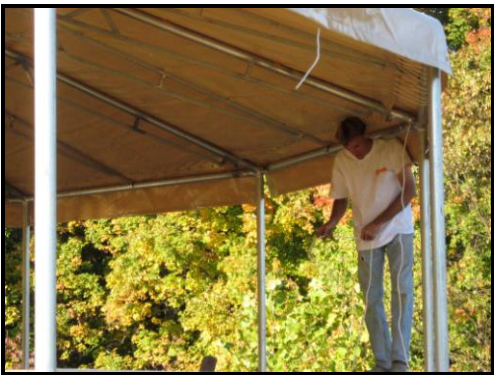

15. Once vinyl cover is centered tie ends.



16. Double check everything.



17. Congratulations!!! Your Round Pen is now ready to use.